

Faraday Cages

for HPPR1 & HPPR2 Installation Manual

Version 001



The information in this manual may be altered without notice.

BRUKER accepts no responsibility for actions taken as a result of use of this manual. BRUKER accepts no liability for any mistakes contained in the manual, leading to coincidental damage, whether during installation or operation of the instrument. Unauthorised reproduction of manual contents, without written permission from the publishers, or translation into another language, either in full or in part, is forbidden.

This manual describes the units as they are at the time of printing. On request, the manufacturer shall supply circuit diagrams, lists of components, descriptions, calibrating instructions and any other information for use by qualified personnel of the user, in charge of repairing the parts of the unit which have been stated by the manufacturer to be "repairable". Such supply shall in no event constitute permission to modify or repair the units or approval of the same.

All rights reserved for the units, circuits, processes and appellations mentioned herein.

This unit is not designed for any type of use which is not specifically described in this manual. Such use may be hazardous.

This manual was written by

WEISS Michel

© August 28, 2003: Bruker Biospin SA

Wissembourg, France

P/N: Z31687 DWG-Nr: 1394.001

Contents

	Contents	iii
1	General information	5
1.1	Introduction	5
	RF protections	5
	Cage overview	5
1.2	Faraday Cages connections	6
	HPPR1 Faraday Cage	
	HPPR2 Faraday Cage	7
1.3	Precaution	8
2	Installation	9
2.1	Cages installation	9
	Figures	15

Contents



General information

Introduction 1.1

The HPPR1 Faraday cage (P/N: W1345074) and HPPR2 Faraday cage (P/N: W1345075) are specifically designed for the radiated interference pollution leaking.

RF protections 1.1.1

The RF protection is for 75 dB from 6 MHz to 15 MHz, for 84 dB from 15 MHz to 30 MHz, for 90 dB from 30 MHz to 900 MHz.

Cage overview 1.1.2

- The size of the cages is 500 mmH x 400 mmW x 600 mmD.
- The weight of one cage is 29 kg.
- The material used for manufacture is red cooper.



1.2

HPPR1 Faraday Cage


1.2.1


Figure 1.1. HPPR1 Faraday cage views





Figure 1.2. HPPR1 Inputs and outputs connectors

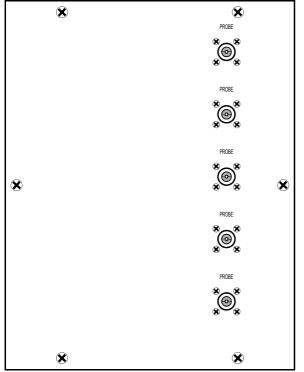

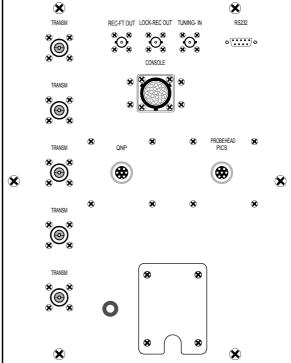

BRUKER

1.2.2



 






Figure 1.4. HPPR2 Inputs and outputs connectors

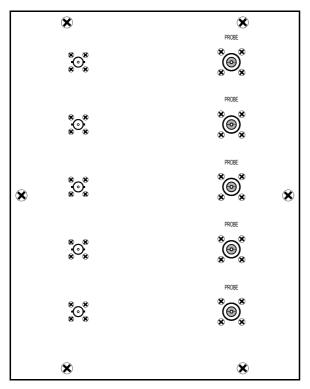

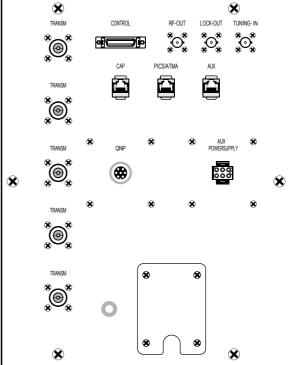

General information

Precaution 1.3

 Use only the coaxial cable SHF 393 (P/N: Z2739) for the connection between the probe head and the Faraday Cage.


 Clean alongside with alcohol in order to preserve a good contact with the cover.



Warning! Avoid all connectors or adaptors type BNC because of leakages.

This chapter describes, step by step, the procedure of installation of the HPPR1 or HPPR2 into the Faraday Cage and its connections.



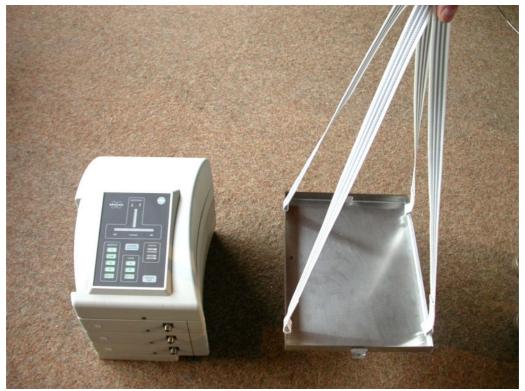

1. Take the HPPR support plate.





2. Pose the HPPR on the plate.

Figure 2.3. HPPR into Faraday cage



3. Introduce the HPPR in the Faraday cage.



Figure 2.4. Plate position

4. Pose the plate between the clinch.



Figure 2.5. HPPR in the cage

5. The HPPR positionned in the Faraday Cage.

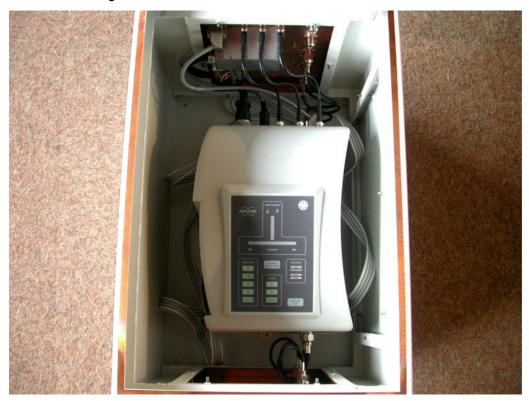


Figure 2.6. Coaxial cables connections

6. To connect cable to cable the coaxial cables at the HPPR.



Figure 2.7. Other cables connections

7. Connect the other cables, like the RS232 cable, the probe head cable, etc...



Figure 2.8. Cage near magnet

8. The HPPR Faraday cage connected to the magnet is ready to function.

Installation



Figures

1 Gener	al information	5
igure 1.1.	HPPR1 Faraday cage views	6
igure 1.2.	HPPR1 Inputs and outputs connectors	6
igure 1.3.	HPPR2 Faraday cage views	7
igure 1.4.	HPPR2 Inputs and outputs connectors	7
2 Install	lation	9
igure 2.1.	HPPR and Plate	9
igure 2.2.	HPPR on plate	10
igure 2.3.	HPPR into Faraday cage	10
igure 2.4.	Plate position	11
igure 2.5.	HPPR in the cage	11
igure 2.6.	Coaxial cables connections	12
igure 2.7.	Other cables connections	12
Figure 2.8.	Cage near magnet	13

Figures



